


Door Weatherstripping

Jamb-up/Foam Tite


DOOR WEATHERSTRIPPING

As shown in the picture on the right, the Jamb-Up installs on the *outside* or "push" side of the door, on the door frame. There is a short piece for the top, and two longer pieces for the sides. You want to work with the door *closed and locked*. This way you can be sure it will fit correctly. The bulb of the Jamb-Up should rest against the door. If the bulb is compressed too tightly against the door, shutting and locking the door will be difficult.

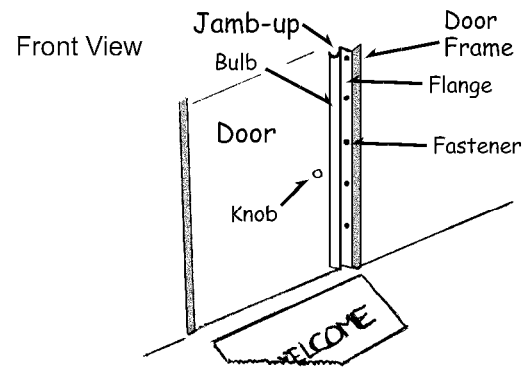

Tools needed: heavy duty scissors, power screwdriver, or hammer (for nails)

1. Install the top section first.
2. Measure the doorway width and cut the short piece to size.
3. Place jamb-up with bulb touching the door.
4. Use screws and power screwdriver to fasten the piece onto the door frame. Try to install the fasteners straight in, and not at an angle. Do not over tighten the screws.
5. Cut a 1/4" notch out of the bulb on the top of the two side pieces so it will fit nicely against the top piece.
6. After every few screws, it is a good idea to open and close the door to check how the jamb-up is fitting. Unscrew and reinstall if necessary. Close and lock the door, then continue the installation.

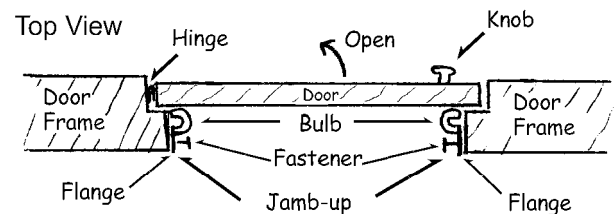

Do and Don't:

- Install weatherstripping while the door is **closed and locked** (especially the deadbolt). **Do not leave door opened or unlocked during installation** (you may have trouble locking the door later!!)
- If old weatherstripping is located where the jamb-up will be installed, remove old materials, nails and screws.
- Make cuts in flange to fit around screen door supports, spring holders, or door knobs.
- Do not install jamb-up over old nails, staples, etc.
- Do not compress bulb against the door. The bulb should not lie away from door without making contact.
- Do not allow weatherstripping to bend or wrinkle between screws.
- Do not install screws at an angle.

Door Sweeps

ALUMINUM VINYL DOORSWEEP

The door sweep mounts on the bottom of the inside, or "pull," side of the door. Aluminum vinyl sweeps are best for exterior doors.

Tools needed: hacksaw, heavy duty scissors, power screwdriver

1. Measure the width of the door and cut the door sweep to size. A hacksaw works best.
2. Place the door sweep against the door so that the bottom of the sweep just touches the door threshold or the floor. Do not place the door sweep such that it rubs or scrapes against the floor.
3. Use the pre-cut holes for screw placement. You may need to pre-drill holes on metal doors.

Tips

- Install door sweep on inside part of door (i.e. the side you pull).
- Remove old door sweep and any hardware in the way.
- If floor is warped near the door, install door sweep to accommodate warped area.
- Slide back any throw rugs that interfere with opening of door with door sweep installed.
- Do not mount door sweep too high (no seal) or too low (floor rubbing) on the door.
- Do not install door sweep in any way making the door difficult or impossible to open
- When cutting the door sweep to size with the hacksaw, make the cut on the hinge side of the door to protect your toes from the rough edge when the door is open.