

Reusable Channel-Lock Vinyl Storm Windows




(applied to inside only)

The vinyl sheets help prevent heat loss and air leakage during the winter and can be removed during the summer. Storm window should sit approximately 1 1/2" – 3" away from the original window. Channels should be placed on the window trim boards or inside window box to allow the spacing.

Tools needed: cleaning solution, paper towels, tin snips, lightweight scissors

Installation Instructions:

1. Clean and dry all surfaces thoroughly before installing.
2. Cut channels to fit window molding. Avoid using channels shorter than 6".
3. Install channel so flat flange is away from the glass, and the channel groove is closest to the glass.
4. Peel back paper from channel and press channel into place around window molding or wall. Position channels carefully. They cannot be moved once they are pressed into place.
5. Adjoin all channels. Corners should be butted. Bottom channel may sit on the window sill.
6. Hold vinyl sheet over channels leaving a margin on all sides. Do not cut vinyl before installing on the window.
7. Starting from either top corner, press retainer strip (lock) into channels, locking vinyl sheet into place.
8. Next, starting from the top, attach sides of vinyl sheet by pressing in retainer strips on left and right sides alternately until bottom is reached.
9. Attach vinyl sheet to bottom channel.
10. Trim excess sheet away from outer edges of retainer strip leaving 2" on all sides.

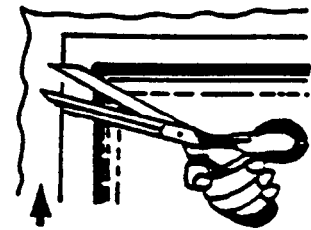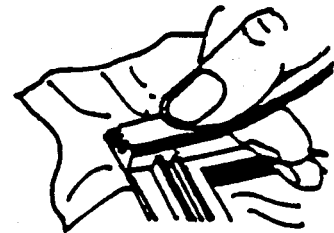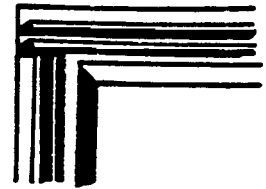

2" on all sides


Reusable Channel-Lock Vinyl Storm Windows

Do and Don't:


- Install inside the house.
- Use correct size of window kit.
- Clean and dry surfaces before adhering channels.
- Install channels with flange facing outward, away from glass.
- Try to avoid installing window kits over plastic mini blinds.
- Make sure channels are installed at least 1/4" away from any raised molding.
- Do not use channels shorter than 6".
- Do not adhere channels on aluminum.
- Do not over-stretch vinyl sheet.
- Do not use hair dryer to shrink vinyl.

Maintenance:


Maintenance of the storm window kits is pretty simple. You could remove the plastic, wash and store for the summer, or roll up the plastic and store the parts in place. If you remove the plastic completely for the summer, it's a good idea to label plastic pieces for each window to save time next season. These kits can last up to 5 years.

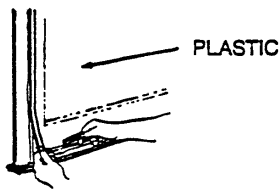


1. Remove snap-in pieces and loosen side pieces to six inches from top of window.

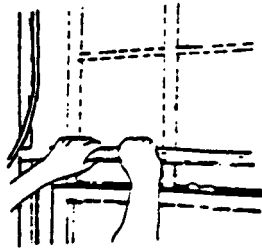

2. Roll up plastic to where side pieces are still in place.

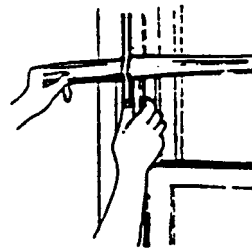

3. Hang each side snap-in piece over rolled plastic.

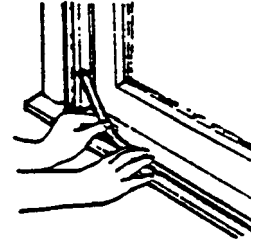

4. Push side and bottom pieces back into frame strip.